

LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the home in which the faucet was first installed.

In the event that Freendo faucets are used in a Commercial Application, this warranty is limited for a period of 5 years, unless otherwise specifically stated in the catalog and/or price book.

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer purchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide new or equivalent replacement parts for any product that proves to be defective under normal usage and service. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

Compass Manufacturing International Freendo Product Service 6702 Enterprise Drive Louisville, KY 40214 800.626.3525 warranty@cmiproduct.com





Model No. : 192-6428 Polished Chrome 192-6429 Brushed Nickel **Spetless** PVD^{*} 192-6430 Oil-Rubbed Bronze 192-7269 Matte Black 192-7270 Matte Gold





Cardania Contractor Tub Only Trim Pack

warranty@cmiproduct.com

Revised 5/17/17 © Compass Manufacturing International

800.626.3525



Helpful Information

5

Parts List

Helpful Tools

Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing.





Flashlight

Pliers



Plumber's Putty and/or Silicone

Safety Glasses

Adjustable Wrench



Screwdriver

Channel Locks


No.	Part Name	
1	Sealing Ring	
2	Sealing Ring	
3	Escutcheon	
4	Cartridge	
5	Cartridge Sleeve	
6	Cartridge Locknut	
7	Handle	
8	Set Screw	
9	Tub Spout	
10	Escutcheon Screw	
11	Hot/Cold Button	
12	Allen Key	


Escutcheon Screw O-rings


Allen Key

14 13

Parts Diagram

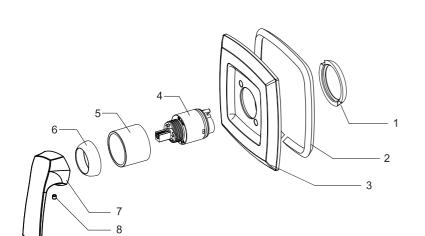

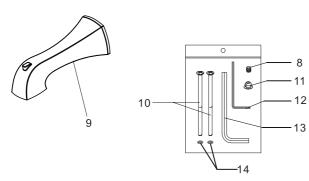


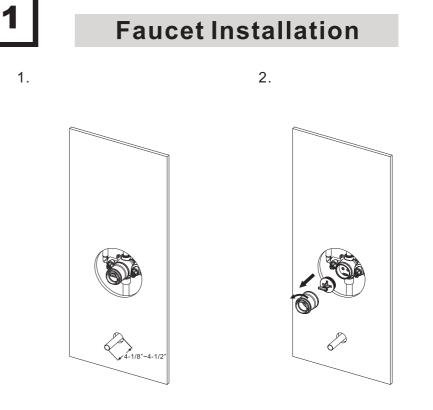

1.For tub spout installation only: install pipe for spout, use proper length so that the pipe will extend 4-1/8"~4-1/2" from the finish wall.


In order to assure proper function, piping from the bottom port of the valve to tub spout outlet must be either 1/2" nominal copper pipe or 1/2" iron pipe. DO NOT use plastic pipe for tub spout.

2.Remove the locknut sleeve, O-ring and test plug as shown. Note: DO NOT DISCARD locknut sleeve. This item is used to secure the cartridge.

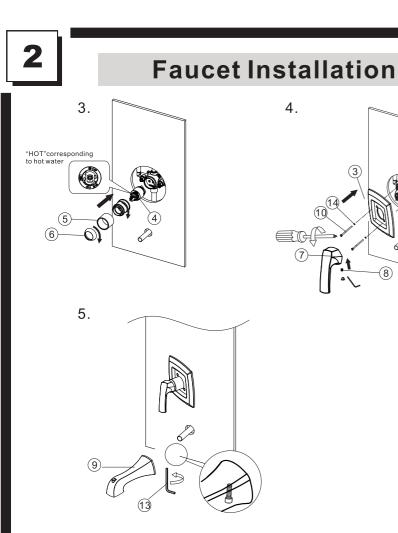

- 3.Install the cartridge (4), cartridge sleeve (5) and cartridge locknut (6) into the valve body.
- 4.Close bathtub drain to avoid losing parts. Install escutcheon (3) and secure it with escutcheon screws (10) and escutcheon screw
 O-rings (14). Make sure valve is in off position. Then assemble the handle (7) and secure it with set screw (8).
- 5.Position the tub spout (9) as shown, adjust it and and tighten with Allen Key $\widehat{13}$.

Configuration

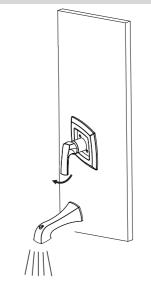

Turn on the water and check for leaks. If there are leaks, please reinstall.

 
Adjusting hot water stop.

 
Hot Water Adjustment

 
3

Positon In The Middle Is Recommended

Cold Water Adjustment







High Temperature setting (Factory setting)

Average Temperature setting

g Low Te

By default, the temperature limiting device is set to the highest temperature (A). In order to reduce the temperature, remove the temperature limiting device and turn clockwise to the desired position (B or C).