

#### LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the home in which the faucet was first installed.

In the event that Freendo faucets are used in a Commercial Application, this warranty is limited for a period of 5 years, unless otherwise specifically stated in the catalog and/or price book.

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer purchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide new or equivalent replacement parts for any product that proves to be defective under normal usage and service. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

#### **Compass Manufacturing International**

Freendo Product Service 6702 Enterprise Drive Louisville, KY 40214 800.626.3525 warranty@cmiproduct.com

Revised 5/17/18



Model No.: 192-6816 Polished Chrome

192-6817 Brushed Nickel **Spatiess** PVD



**Noble Slide Bar Faucet** 



# **Helpful Information**

#### Helpful Tools

#### Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing.



and/or Silicone







Flashlight



Safety Glasses



Adjustable Wrench







Screwdriver

Pliers


Channel Locks

## 5

### **Parts List**

No.	Part Name
1	End Cap
2	Washer
3	Valve Body
4	Cartridge
5	Cartridge Housing
6	Lock Nut
7	Trim Cap
8	Protective Cover
9	Screw
10	Sealing Washer
11	Stopper
12	Spring
13	O-ring
14	Adjuster
15	O-ring
16	Adjuster Seat
17	Sealing Washer
18	Washer
19	Escutcheon Plate
20	Handle
21	Set Screw
22	Shower
23	Shower Hose
24	Shower Holder
25	Wall Supply
26	Slide Bar
27	Trim Cap
28	Base Support
29	Screw
30	Insert
31	Handle Button
32	Allen Key
33	O-ring
34	Screw
35	O-ring
36	Screw
37	Teflon Tape


### **Parts Diagram**

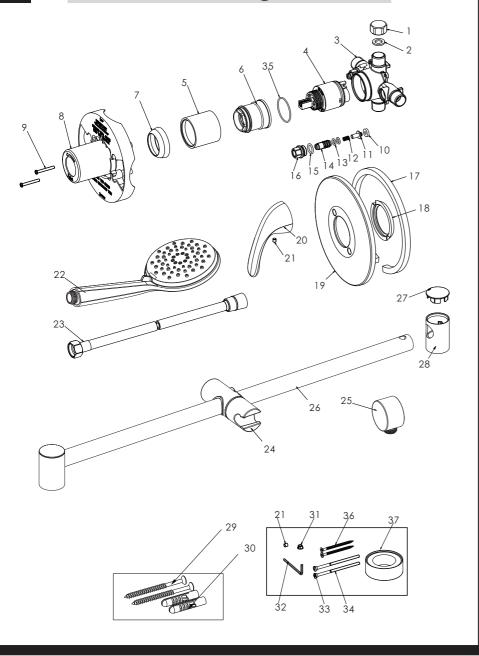

# 1

### **Shower Installation**

 
1.



2.



3.

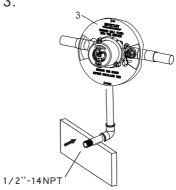


Water Supply Stub Out

1. If this is not a thin wall mounting, the protective cover (8) may be removed from the valve body (3).

**Please Note:** Be sure the valve body is secured to the support cross board for stability.


- 2. Apply teflon tape (37) on all pipe threads. Install an elbow on the end, secure the shower elbow to the 2x4 bracing.
- 3. Install the nipple to the stub out, using the proper length nipple so that the nipple extends 3/8" from the finished wall. In order to assure proper function, piping from the bottom portion of the valve to the water supply stub out must be 1/2" nominal copper pipe or 1/2" iron pipe. Do not use PEX for the water supply stub out.

#### **Shower Installation**

 

 5.





7.



8.




- 4. Turn on the hot and cold water supply lines with the faucet off, check for leaks. If there is a leak, refer to the correct section and repeat the step.
- 5. Remove the protective cover (8).
- 6. Install escutcheon plate (19) and secure with screws (34) and o-ring 33. Make sure the valve is in the off position.

Please Note: Do not remove the customer service tag with the model number and phone number as this will be helpful if you need assistance in the future

- 7. Assemble the handle (20) on the escutcheon plate (19), secure with the set screw (21).
- 8. Turn on the faucet and let the water run from the water supply stub out for one minute to flush out the debris from the line.
- 9. Install wall supply (25). See diagram for visual.

### Configuration

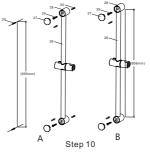



10 . Gauge the fixed position according to the actual measurement of product.


Drywall or Ceramic Tile Installation: As shown in figure A. drilling 5/16" holes and tapping insert anchors (5) in the wall. Put together the slide bar (1) and the base support (3), install it to the wall using the screws (4), put on the trim caps (6). As shown in figure B, put together the slide bar (1) and the base support (3), install it to the wall using the screws (4), put on the trim caps 6.

Wood Wall Stud Installation: Drill 3/32" holes repeat figure B step.

- 11. Apply teflon tape to the ends of the shower hose 23 and install it per the diagram.
- 12. Turn on the water and check for leaks. If there are leaks, please reinstall.

#### Adjusting hot water stop.

 Hot Water Adjustment



(Factory setting)

 
High Temperature setting



Positon In The Middle Is Recommended

Average Temperature setting

Cold Water Adjustment



By default, the temperature limiting device is set to the highest temperature (A). In order to reduce the temperature, remove the temperature limiting device and turn clockwise to the desired position (B or C).