

LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the home in which the faucet was first installed.

In the event that Freendo Faucets are used in a Commercial Application, this warranty is limited for a period of 5 years, unless otherwise specifically stated in the catalog and/or price book.

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer purchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide new or equivalent replacement parts for any product that proves to be defective under normal usage and service. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

Compass Manufacturing International Freendo Product Service 6702 Enterprise Drive Louisville, KY 40214 800.626.3525 warranty@cmiproduct.com

warranty@cmiproduct.com

Revised 09/19/24 © Compass Manufacturing International

800.626.3525



Model No.: 192-6440 Polished Chrome 192-6441 Brushed Nickel <u>Spetless PVD</u> 192-6442 Oil-Rubbed Bronze 192-7508 Matte Black





CARDANIA ROMAN TUB FAUCET 3 Hole Installation




Helpful Information

Helpful Tools

Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing.





Pliers





Plumber's Putty and/or Silicone

Flashlight **Basin Wrench**

Safety Glasses

















Channel Locks

Adjustable Wrench



5

Trouble-Shooting


If you're followed the instructions carefully and your faucet still does not work properly, take these corrective steps.

Problem	Cause	Action
The water will not turn off completely.	Remove Handles (#4) and Cartridges (#24 Hot or #37 Cold) check to see if the ceramic disk is dirty or permanently damaged.	Install the Cartridge (#24 Hot or #37 Cold) or Replace them. Re-install the Handles (#4).


Parts List

No.	Part Name
1	Handle Wheel
2	O-ring
3	O-ring
4	Handle Body
5	Handle Connector
6	Knob
7	Knob Connector
8	Spout
9	Screw
10	Washer
11	O-ring
12	Stopper
13	Base
14	Aerator
15	Allen Key
16	Cartridge Locknut
17	O-ring

No.	Part Name
18	Washer
19	Clamp
20	Nut
21	Screw
22	Set Screw
23	Handle Adapter
24	Hot Cartridge
25	Brass Valve Body
26	Сар
27	O-ring
28	Spout Locknut
29	O-ring
30	Shank
31	O-ring
32	Spout Brass Tee
33	Washer
34	Stopper
35	Connect Hoses
36	Connect Hoses
37	Cold Cartridge

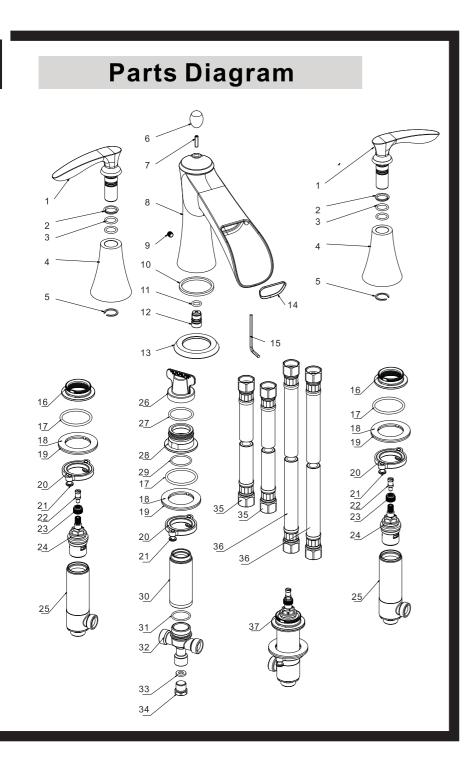

Faucet Installation

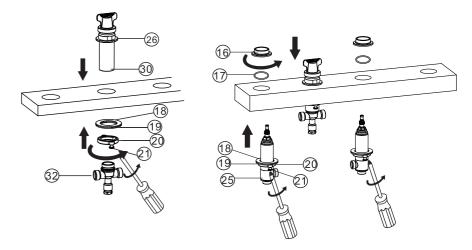


- 1. Shut off water supply and drain lines. Clean the surface area thoroughly. Make sure mounting area is clean and dry.
- 2. Position the shank ③ on countertop. From underneath the countertop, assemble washer 18, clamp 19, nut 21 and screw 21, and tighten with the screwdriver (But do not over tighten). Then connect the spout brass tee ③ to the shank ③.
- Position the brass valve body 25 to the left of the shank 30 on the countertop. From underneath the countertop, assemble the washer 18, clamp 19, nut 20, and screw 21, then tighten with the screwdriver. (But do not over tighten). Then attach the cartridge locknut 16, tighten the locknut 16 by hand and secure the screws with the screwdriver. Repeat the steps for the other side.

2

Faucet Installation

1. Attach the spout (8) to the spout valve in a counter-clockwise direction, install the set screw (9) using the allen key (15).

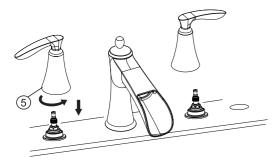


2. Attach the handle body (5) on the valve in a counter-clockwise direction. Repeat on the other side.

Configuration B. C. B. C. Image: Configuration Image: Configuration

Warning: The supply valves and supply lines are not included.

Connect to water supply lines with either:

- (A) 3/8 " O.D. Copper tubing (ball nose risers with the coupling nuts or;
- (B) 3/8 " Copper tubing (no ball) with supplied tube head interior connector or;
- (C) IPS faucet connectors ($\frac{1}{2}$ ")



3

Α.

Important:

Tighten connection with two wrenches to prevent damage to tube body. Be careful not to bend the stem as this will void the product warranty.