

LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the home in which the faucet was first installed.

In the event that Freendo faucets are used in a Commercial Application, this warranty is limited for a period of 5 years, unless otherwise specifically stated in the catalog and/or price book.

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer purchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide replacement parts for installation by consumer for any parts that prove defective under normal usage and service with new or equivalent parts. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

Compass Manufacturing International

Freendo Product Service 6702 Enterprise Drive Louisville, KY 40214 800.626.3525 warranty@cmiproduct.com

Revised 3/17/16

© Compass Manufacturing International

800.626.3525



Model No.: 192-6203 Polished Chrome

192-6205 Brushed Nickel **Spotless** PVD

192-6207 Oil-Rubbed Bronze





Prestige Contractor Trim Pack for Single Handle Pressure Balanced Tub Only



Helpful Information

Helpful Tools

Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing.







Flashlight



Safety Glasses



Adjustable Wrench







Screwdriver

Pliers


Channel Locks


5


Parts List

14	Escutcheon Screw O-rings
13	Allen Key
12	Allen Key
11	Hot/Cold Button
10	Escutcheon Screw
9	Tub Spout
8	Set Screw
7	Handle
6	Cartridge Locknut
5	Cartridge Sleeve
4	Cartridge
3	Escutcheon
2	Sealing Ring
1	Sealing Ring
No.	Part Name

Parts Diagram

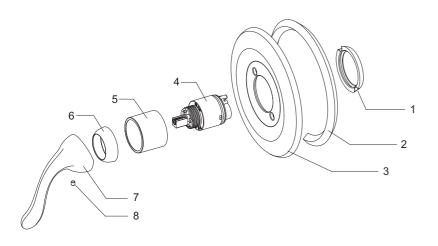

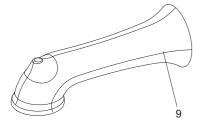

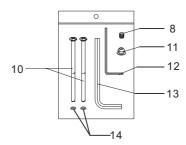


1

Faucet Installation

1.


2.







- 1.For tub spout installation only: install copper pipe for spout, use proper length copper pipe so that the pipe will extend 1-1/2"~3" from the finish wall.
 - In order to assure proper function, piping from the bottom port of valve to tub spout outlet must be either 1/2" nominal copper pipe or 1/2" iron pipe.
- 2.Remove the locknut sleeve, O-ring and test plug as shown. Note: DO NOT DISCARD locknut sleeve. This item is used to secure cartridge.

Faucet Installation

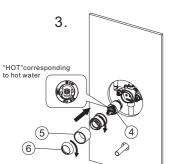

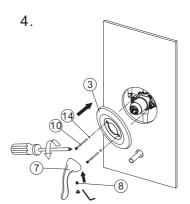


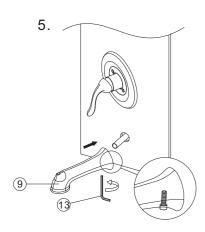

- 3.Install the cartridge 4, cartridge sleeve 5 and cartridge locknut 6 into the valve body.
- 4.Close bathtub drain to avoid losing parts. Install escutcheon 3 and secure it with escutcheon screws 10 and escutcheon screw O-rings 14. Make sure valve is in off position. Then assemble the handle 7 and secure it with set screw 8.
- 5. Position the tub spout (9) as shown, adjust it and fix it with Allen Key (13).

3

Configuration

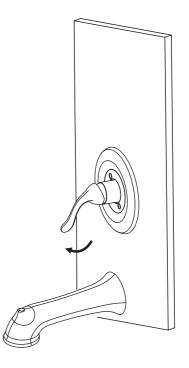

Turn on water and check for leaks. If there are leaks, please reinstall.