

LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the home in which the faucet was first installed.

In the event that Freendo faucets are used in a Commercial Application, this warranty is limited for a period of 5 years, unless otherwise specifically stated in the catalog and/or price book.

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer purchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide new or equivalent replacement parts for any product that proves to be defective under normal usage and service. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

Compass Manufacturing International

Freendo Product Service 6702 Enterprise Drive Louisville, KY 40214 800.626.3525 warranty@cmiproduct.com

Revised 09/19/24

© Compass Manufacturing International

800.626.3525





Model No.: 192-6413 Polished Chrome

192-6414 Brushed Nickel *Spotless* PVD

192-6415 Oil-Rubbed Bronze

192-7157 Matte Black 192-7156 Matte Gold



Cardania Handle High Arc Pull-Down Kitchen Faucet

3 Hole or Single Hole Installation




Helpful Information

Helpful Tools

Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing.

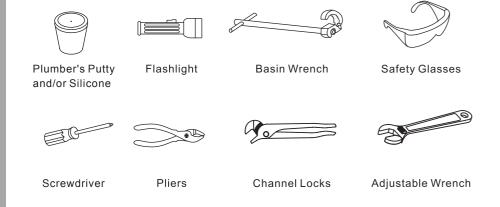


5

Parts List


31	Allen Key
30	Weight
29	Under-plate Seal
28	Under-plate
27	Deck Plate
26	Screw
25	Locknut
24	Clamp
23	Protective Sleeve
22	Shank
21	Quick Connect Assembly
20	Stop Valve
19	Assembly
18	O-ring
17	Cartridge Base
16	Cartridge
15	Cartridge Locknut
14	Trim Cap
13	Set Screw
12	Index
11	Handle
10	Body
9	Retainer
8	Connector
7	O-ring
6	Ring
5	Spray
4	Pull-out Hose
3	Ring
2	Hose Guide
1	Spout
No.	Part Name

Parts Diagram

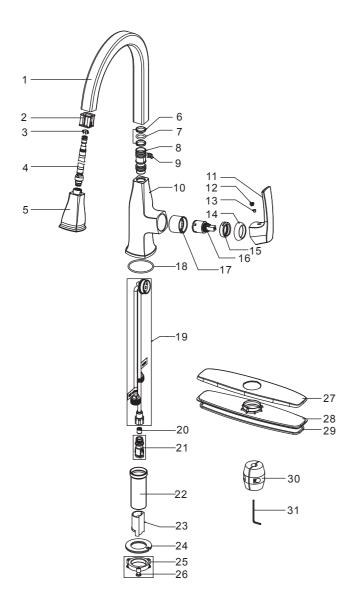

1


Install With Deck Plate

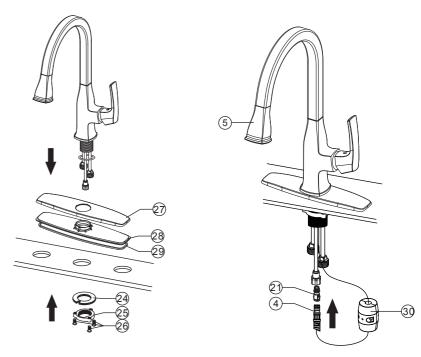

- 1. Assemble deck plate ② , under-plate ② and under-plate seal ② to faucet.
- 2. Position faucet on countertop.
- 3. From underneath the countertop, assemble clamp ② and locknut ② and screw ② . Tighten the locknut by hand and secure the screws with the screwdriver.
- 4. Connect pull-out hose 4 to quick connect assembly 2. CAUTION: Make sure hose is properly engaged and secure in quick connect assembly.
- 5. Fix the weight 30 to the pull-out hose 4.
- 6. Connect supply lines to water supply valve. (supply valves and supply lines are not included).

 CAUTION: DON'T OVER TIGHTEN THE SUPPLY LINES. OTHERWISE IT MAY DAMAGE
 - CAUTION: DON'T OVER TIGHTEN THE SUPPLY LINES. OTHERWISE IT MAY DAMAGE THE WASHERS AND NUTS OF THE SUPPLY LINES AND THIS COULD CAUSE THEM TO LEAK.
- 7. Remove spray (5) from faucet and flush water through faucet to remove any debris.
- 8. Replace spray (5) and run water through the faucet to check for leaks at all of the connections.


Install Without Deck Plate

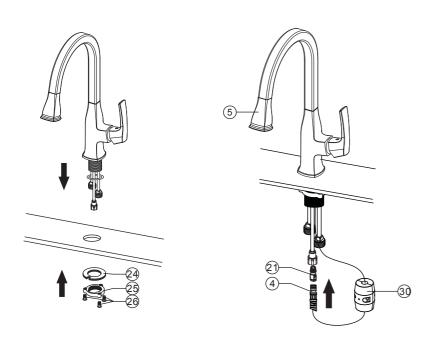

- 1. Position faucet on countertop.
- 2. From underneath the countertop, assemble clamp ② and locknut ⑤ and screw ⑥. Tighten the locknut by hand and secure the screws with the screwdriver.
- 3. Connect pull-out hose 4 to quick connect assembly 2. CAUTION: Make sure hose is properly engaged and secure in quick connect assembly.
- 4. Fix the weight 30 to the pull-out hose 4.
- 5. Connect supply lines to water supply valve. (supply valves and supply lines are not included).
 - CAUTION: DON'T ÓVER TIGHTEN THE SUPPLY LINES. OTHERWISE IT MAY DAMAGE THE WASHERS AND NUTS OF THE SUPPLY LINES AND THIS COULD CAUSE THEM TO LEAK.
- 6. Remove spray ⑤ from faucet and flush water through faucet to remove any debris.
- 7. Replace spray (5) and run water through the faucet to check for leaks at all of the connections.

3

Configuration

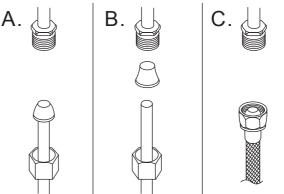


Warning:
The supply valves and supply lines are not

included.

Connect to water supply lines with either:

- (A) 3/8" O.D. Copper tubing (ball nose risers with the coupling nuts or;
- (B) 3/8" Copper tubing (no ball) with supplied tube head interior connector or;
- (C) IPS faucet connectors (½")



Important:

Tighten connection with two wrenches to prevent damage to tube body. Be careful not to bend the stem as this will void the product warranty.



Important:

Let both hot and cold water run for one minute. This will help clean any debris that might clog the system.

Test system for leaks.