

#### LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the home in which the faucet was first installed.

In the event that Freendo faucets are used in a Commercial Application, this warranty is limited for a period of 5 years, unless otherwise specifically stated in the catalog and/or price book.

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer purchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide replacement parts for installation by consumer for any parts that prove defective under normal usage and service with new or equivalent parts. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

Compass Manufacturing International Freendo Product Service 6702 Enterprise Drive Louisville, KY 40214 800.626.3525 warranty@cmiproduct.com





Compass ™

Manufacturing

NTERNATIONAL

### CONTRACTOR VALVE PACK PEX FITTING "TYPE A" FACING DOWN

warranty@cmiproduct.com

Revised 5/08/16 © Compass Manufacturing International

800.626.3525



## **Helpful Information**

5

# **Parts List**

Helpful Tools

### Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing.









Plumber's Putty

Flashlight

**Basin Wrench** 

Safety Glasses




Screwdriver















Pliers



Channel Locks











Adjustable Wrench

No.	Part Name
1	Screw
2	Protective sleeve
3	Protective kit
4	Locknut
5	O-ring
6	Pipeline Testing Stopper
7	O-ring
8	Valve body
9	Sealing Washer
10	Stopper
11	Spring
12	O-ring
13	Adjuster
14	O-ring
15	Integral Stop Locknut
16	Teflon tape
17	Washer
18	End Cap
19	Screw

### **Parts Diagram**

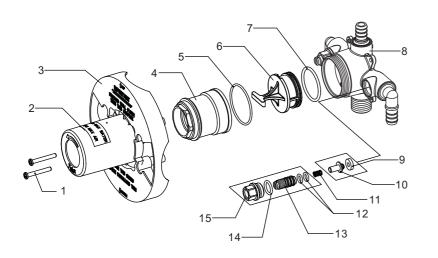


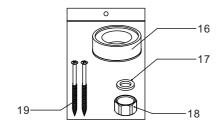

### **Faucet Installation**

1

1.

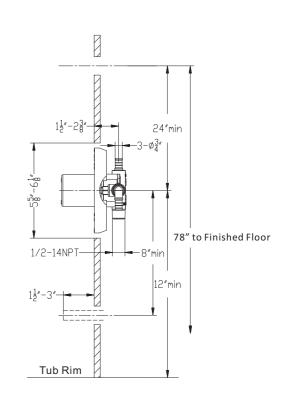


1. Make sure the valve is properly oriented. The word "UP" on the valve body should be pointed towards the shower riser and the word "DOWN" should be pointed towards the tub spout outlet. Insert valve assembly with plaster guard into cut hole in wall. The flat surface marked "IMPORTANT" on the plaster guard should be FLUSH with the finished wall surface.


CAUTIONS:1/2" Copper or larger required for drop from valve to tub spout to prevent back pressure that will cause leakage from shower head when discharging water through tub spout.

4



### **Faucet Installation**

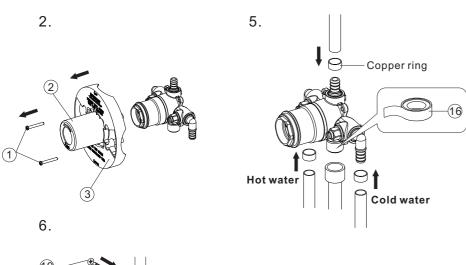

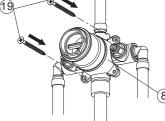


- 2. Remove the screws (1), protective sleeve (2), protective kit (3) as shown.
- 3. Insert the copper ring into the pipeline, then connect with quick connector, tighten it by pliers. Connect the down outlet with pipeline by teflon tape. See Pex installation instructions.

CAUTIONS: If the shower head or spout is not needed, use the washer to plug the valve hole of "DOWN" or "UP". The copper rings are not included the parts.

- 4. See Pex connector instructions for full details on installation. Some may vary depending on the manufacturer.
- 5. Tighten the screw 19 to fix the valve body 8 into the wall.

## Configuration

3

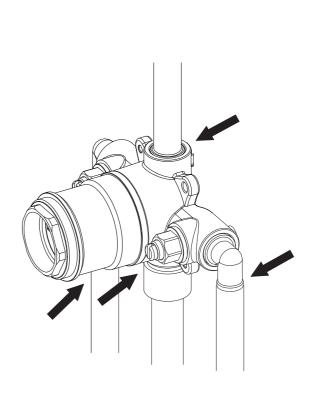

Turn on water and check for leaks. If there are leaks, please reinstall.